





Connecting the Linux Pack Using EOP (Ethernet Over Power)

If you are installing an EOP module to connect your spa to your home network please follow the instructions below

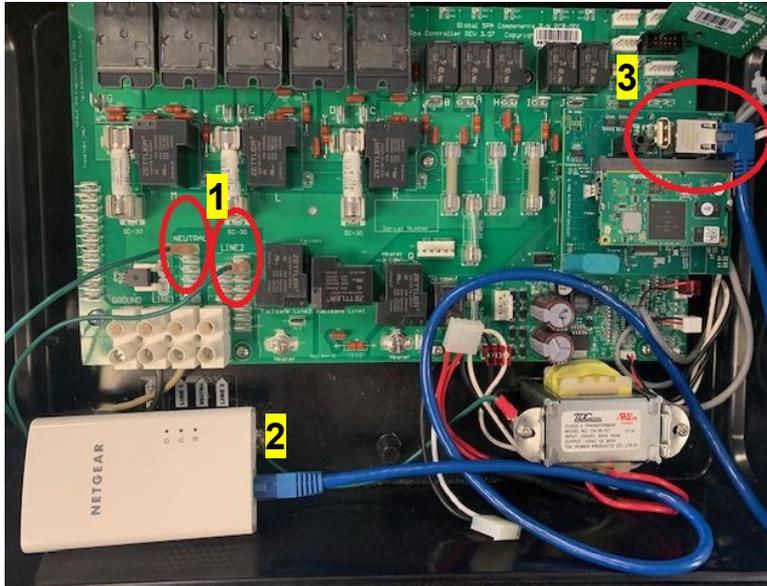

1. Connect one EoP to the Main Control Board on Line 2 and Neutral.
2. Next plug the Ethernet cable into the ethernet port on the EoP module.
3. Plug the other end of the Ethernet Cable into the ethernet port on the processor card.

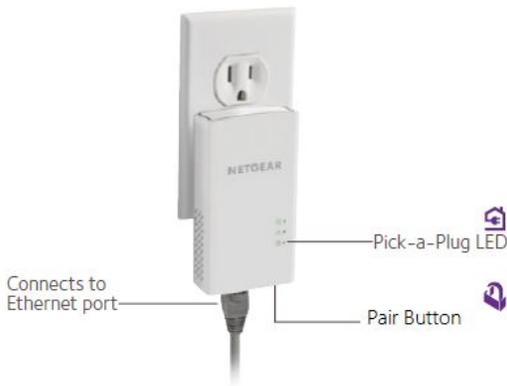

1. Plug the other EOP module into a power point next to you home router. **This must be plugged directly into a wall outlet, not an extension cord, power bar or surge protector.**
2. Next, connect one end of the ethernet cable to the EOP module in the wall and the other end into a LAN port on the home router. The 2 EOP modules should be communicating with each other now.
3. To see if the spa has received an IP address from your home router, go to the spa's topside control pad to access the LLP (Low Level Programming). Be sure to record the IP address number. Please see What is my hot tubs lower level programming document.

PLEASE NOTE: .100 & .0 are False IP numbers; any other numbers are fine. Please reset the breaker and repeat this step to find the proper IP Address




**ARCTIC
HOT TUBS**
www.ArcticHotTubs.com

Connecting the Linux Pack Using EOP (Ethernet Over Power)



img 1.1

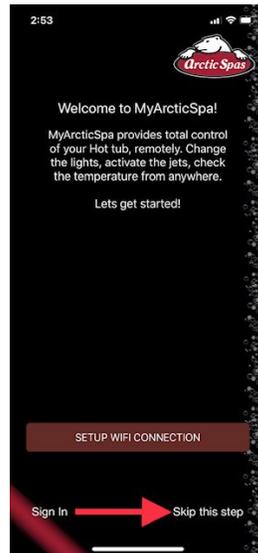

img 1.2



img 1.3



1. Open the Arctic Spas app on your device. If you have not downloaded the app yet please go to the app store and search for Arctic Spas.
2. Select "Setup New Spa" (img 1.1)
3. On the setup WIFI connection page select "Skip this Step". (img 1.2)
4. The arrow above the WIFI icon on the topside display should be solid. It can take approximately 45 seconds to appear. (img 1.3)
5. Once the WIFI is connected you can enter the information from your myarcticspa.com account that you have created. If you have not yet created a username or password please visit www.myarcticspa.com and create an account.