




## Where can I find my Spaboy readings on my topside?

Pictured below is a standard Arctic Spa topside control. The shape or overlay may be different but the 8 buttons should be the same. If you have a different topside please reach out to [support@arctichottubs.com](mailto:support@arctichottubs.com)

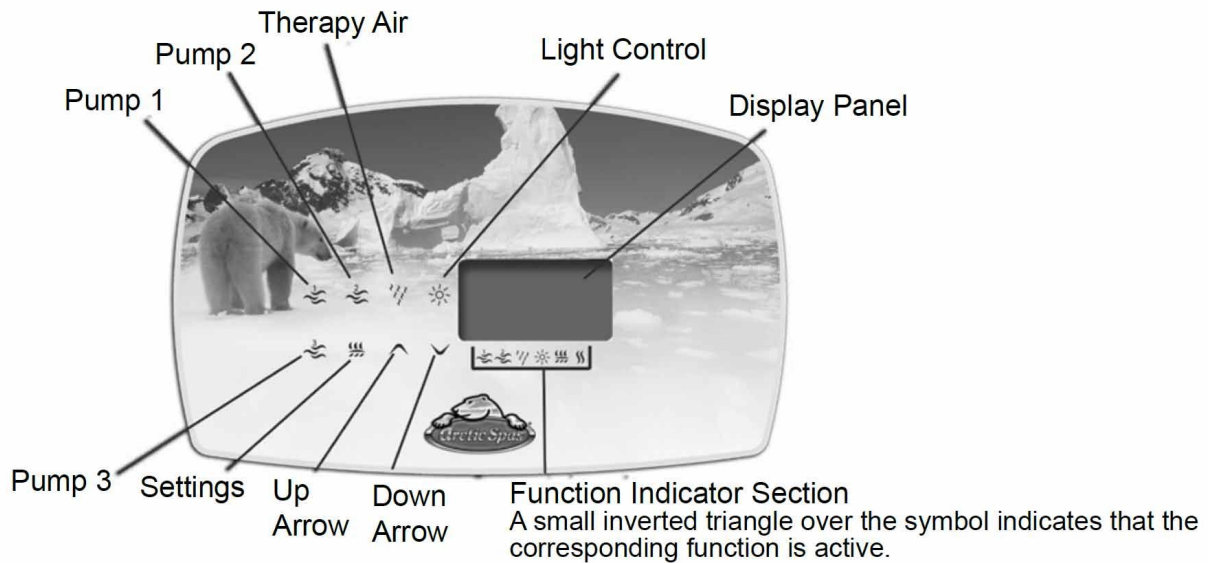

**\*\*These functions are applicable to Arctic Spas 2011 to 2019**

Here is how to access your Spa Boy readings

1. Press and hold the **Settings** button until **sbrd** appears on the display. You will first see SETT, then LLP.
2. When you let go of the button you will see "O" followed by numbers. These numbers refer to ORP
3. Press the **Settings** button again and pH will appear followed by numbers. These numbers represent the pH level of the spa. **Ideal is between 7.2 -2.6**
4. Press the **Settings** button again until the temperature returns

ORP levels should be between the following:

Low Scale: 545-555    Medium Scale: 645-655    High Scale: 745-755

The scale is based on usage. There is currently no way to change this through the topside. Accessing Spaboy through [myarcticspa.com](http://myarcticspa.com) or the app allows you to adjust your ORP range. If you are not able to see your readings on the display please ensure your firmware is up to date. When you reset the breaker to the spa your firmware will scroll across the screen you are looking to see .38 on the end.